

## **Machine Dishwashing Troubleshooting Guide**

PROBLEMS & CAUSES		Films or Spots on Ware	Soil on Ware	High Detergent Usage	High Rinse Aid Usage	Staining	Foaming	Dirty Machine	Wet Plates & Ware	Drying Spots or Steaks	Detergent Carryover	Food Particles on Ware	Protein Bloom	ACTIONS
Leaking Drain				✓										Ensure plug is correctly in place. Replace drain plug or o-ring
Dirty/Scaled Probe				✓										Clean, descale or replace probe and check wire connections
Blocked Wash Jets	Wash		✓			✓		✓				✓	✓	Remove, clean wash and rinse arms and replace
	Rinse		✓					✓			✓	✓	✓	Remove, clean wash and rinse arms and replace
Rinse Not Working		✓	✓						✓	✓	✓	✓		Remove, clean wash and rinse arms and replace
Detergent Conc.	Too High	<b>✓</b>		✓							✓			Lower detergent concentration
	Too Low		✓			✓							✓	Increase detergent concentration
Rinse Aid Conc.	Too High				✓		✓			✓				Lower rinse aid concentration
	Too Low	✓							✓					Increase rinse aid concentration
Rinse injector Not Working									✓					Contact machine manufacturer
Wash Temp 55 to 70°C	Too High		✓			✓							✓	Lower wash temperature
	Too Low		✓			✓	✓							Increase wash temperature
Rinse Temp 75 to 90°C	Too High												✓	Lower rinse temperature
	Too Low								✓				✓	Increase rinse temperature
Leaking Valves				✓							✓			Contact machine manufacturer
Poor Pre Scraping			✓											Improve scraping and rinse method
Poor Racking			✓			✓								Improve racking method
Stacking Too Quickly									✓	✓				Allow longer drying time
Rinse Arm Spinning	Too Fast		✓								✓			Contact machine manufacturer
	Not		✓								✓			Contact machine manufacturer
Rinse Pressure	Too High			✓	✓									Increase rinse pressure
	Too Low		✓						✓		✓	✓		Lower rinse pressure
Heavy Soil Loading in Machine				✓			✓	✓						Improve scraping and rinse method